

LOADING ARRANGEMENTS

- NOTES:
1. The usable fuel C.G. arm for standard, long range and Integral tanks is located at station 48.0.
 2. The rear cabin wall (approximate station 108) or aft baggage wall (approximate station 142) can be used as convenient interior reference points for determining the location of baggage area fuselage stations.

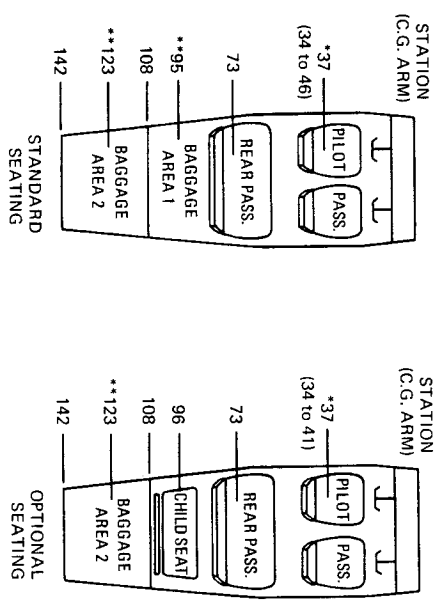


Figure 6-3. Loading Arrangements

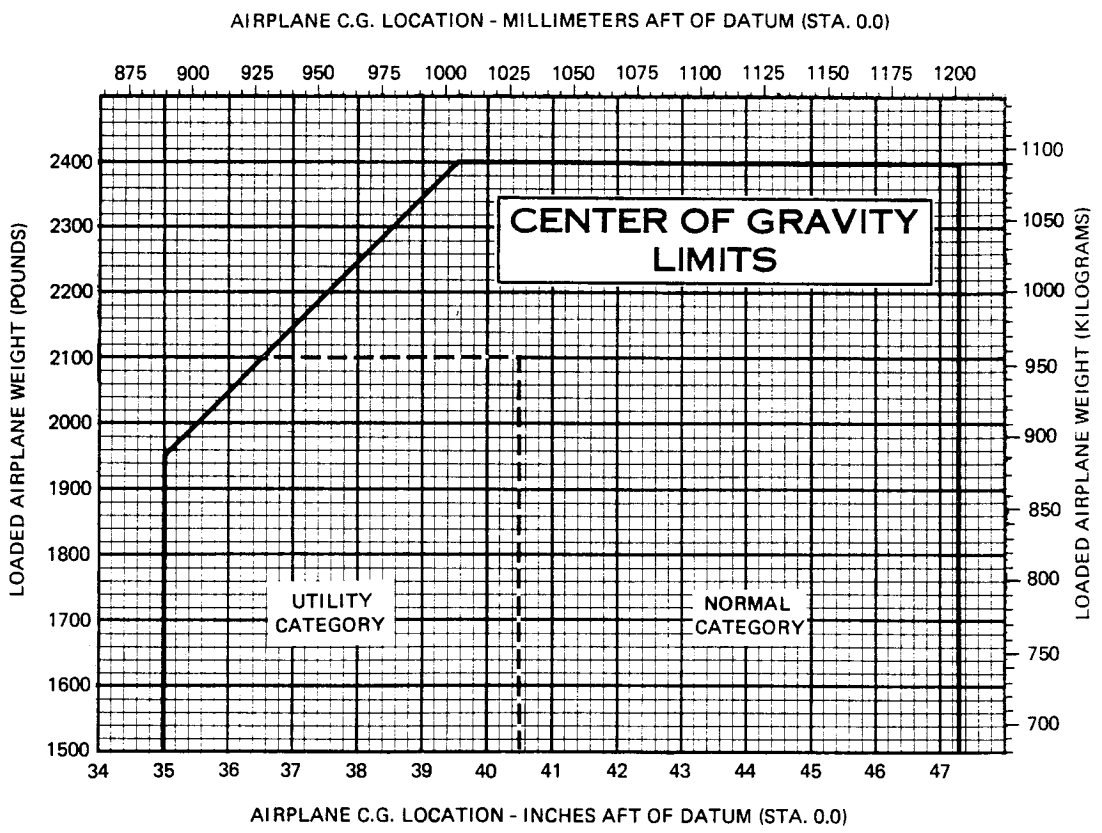


Figure 6-8. Center of Gravity Limits